AD	

Grant Number: DAMD17-98-C-8030

TITLE: Human Monoclonal Antibodies for Neutralization of Botulinum

Neurotoxin

PRINCIPAL INVESTIGATOR: James D. Marks, M.D., Ph.D.

CONTRACTING ORGANIZATION: University of California

San Francisco, California 94143-0962

REPORT DATE: May 2000

TYPE OF REPORT: Final

PREPARED FOR: U.S. Army Medical Research and Materiel Command

Fort Detrick, Maryland 21702-5012

DISTRIBUTION STATEMENT: Approved for Public Release;

Distribution Unlimited

The views, opinions and/or findings contained in this report are those of the author(s) and should not be construed as an official Department of the Army position, policy or decision unless so designated by other documentation.

Form Approved

REPORT DOCUMENTATION PAGE

OMB No. 074-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503

1. AGENCY USE ONLY (Leave	2. REPORT DATE May 2000	3. REPORT TYPE AND Final (1 May 9		ט
blank) 4. TITLE AND SUBTITLE	Way 2000	Tillal (1 May 9	5. FUNDING NU	IMBERS
Human Monoclonal Antibodies for	Neutralization of Botulinum Ne	eurotoxin	DAMD17-	
C AUTHOR(C)				
6. AUTHOR(S) James D. Marks, M.D., Ph.D				
7. PERFORMING ORGANIZATION NAI University of California	ME(S) AND ADDRESS(ES)		8. PERFORMING REPORT NUI	G ORGANIZATION MBER
San Francisco, California 94	4143-0962			
E-Mail: marksj@anesthesia.ucsf.	edu			
9. SPONSORING / MONITORING AGE	NCY NAME(S) AND ADDRESS(ES	S)		NG / MONITORING EPORT NUMBER
U.S. Army Medical Research and M Fort Detrick, Maryland 21702-5012				
11. SUPPLEMENTARY NOTES				
	Report contains color g	raphics.		
12a. DISTRIBUTION / AVAILABILITY S				12b. DISTRIBUTION CODE
Approved for Public Release; Distri	bution Unlimited			
13. ABSTRACT (Maximum 200 Words))		. 1.	· (D.NE) A.D I.E. T-
The purpose of this work is to generate a large panel of antibodies domain (H _C). RNA was prepared, antibody fragment gene repertoire BoNT/A, B, and E H _C resulted in the toxin neutralization, it was necessate to the rapid serum clearance of so shorter half life than IgG. Previous combination of two neutralizing so significantly shorter than IgG's, the expression as human IgG (in the calcable depth of the combination of the calcable depth of the calcable d	s, mice transgenic for the human the human variable regions are is. The repertories were clone he isolation of a large panel of arry to express the scFv as fusion of the control of the c	an immunoglobulin wer mplified by PCR and us ed to create phage anti- human monoclonal scF- ins with the human IgG- increased serum half 1 man scFv showed toxin ize 100 toxin LD ₅₀ s. Somes of neutralizing scF- numan chimeric IgG (in	re immunized was de to construct ibody libraries. It is antibody fragrate to the region from the compared to the neutralization ince the serum of the case of must be serum to the case of must be to the case of t	ith BoNT/A, B, and E binding human single chain Fv (scFv) Selection of the libraries on nents. To demonstrate in vivon the yeast Pichia pastoris due scFv, but had a significantly in vivo as Fc fusions, with a half life of the Fc fusions was d into a mammalian vector for rine scFv). To date, three IgG

17. SECURITY CLASSIFICATION OF REPORT Unclassified	18. SECURITY CLASSIFICATION OF THIS PAGE Unclassified	19. SECURITY CLASSIFICATION OF ABSTRACT Unclassified	20. LIMITATION OF ABSTRACT Unlimited

constructed from scFv derived from transgenic mice immunized with BoNT/A, B, and E H_C. Our plan is to purify IgG from each clone and evaluate in vivo neutralization potency for each unique antibody and for combinations of antibodies. In this way, we

anticipate identifying panels of antibodies capable of neutralizing BoNT/A, B, and E.

FOREWORD

Opinions, interpretations, conclusions and recommendations are those of the author and are not necessarily endorsed by the U.S. Army.

Where copyrighted material is quoted, permission has been obtained to use such material.

Where material from documents designated for limited distribution is quoted, permission has been obtained to use the material.

Citations of commercial organizations and trade names in this report do not constitute an official Department of Army endorsement or approval of the products or services of these organizations.

In conducting research using animals, the investigator(s) adhered to the "Guide for the Care and Use of Laboratory Animals," prepared by the Committee on Care and use of Laboratory Animals of the Institute of Laboratory Resources, national Research Council (NIH Publication No. 86-23, Revised 1985).

NA_ For the protection of human subjects, the investigator(s) adhered to policies of applicable Federal Law 45 CFR 46.

In conducting research utilizing recombinant DNA technology, the investigator(s) adhered to current guidelines promulgated by the National Institutes of Health.

In the conduct of research utilizing recombinant DNA, the investigator(s) adhered to the NIH Guidelines for Research Involving Recombinant DNA Molecules.

NA In the conduct of research involving hazardous organisms, the investigator(s) adhered to the CDC-NIH Guide for Biosafety in Microbiological and Biomedical Laboratories.

PI Signature Date

Table of Contents

Sec	ction	Page numbers
1.	Cover Page	1
2.	SF298	2
3.	Foreword	3
4.	Table of Contents	4
5.	Introduction	5-9
6.	Body of Report	10-22
7.	Key Research Accomplishments	22
8.	Reportable Outcomes	22-23
9.	Personnel supported by contract	23
10.	Conclusions	23-24
11.	References	25
12.	Additional Tables	26-28

5. Introduction

5.1. The problem to be studied

The overall goal of this proposal is to produce neutralizing human monoclonal antibodies against Botulinum neurotoxins for immunoprophylaxis and immunotherapy. Antibodies will be generated using a novel approach, phage display, which overcomes the limitations of conventional hybridoma technology. The proposal represents a continuation of work begun under DAMD17-94-C-4034 titled "Production of Human Antibodies which Neutralize Botulinum Neurotoxin Type A". In the sections below, we first describe the problem, the limitations of currently available reagents, the novel approach we have used for this work (phage display), results obtained to date under DAMD17-94-C-4034, and specific aims and experimental design for the current preproposal.

5.1.1. Background

Botulinum neurotoxins (BoNT) are neurotoxic proteins that block the release of the neurotransmitter acetylcholine leading to flaccid paralysis and death from asphyxia. Inadvertent ingestion of contaminated food leads to the clinical disease Botulism. BoNTs have also been intentionally produced for use as biological warfare agents and weapons of terror due to their potency (microgram quantities are lethal) and ease of production using unsophisticated techniques For example, Iraq has declared the production of at least 19,000 liters of concentrated BoNT, of which 10,000 liters were loaded into munitions (1). Consequently, countermeasures designed to protect against this biological warfare agent have been developed, but each one has limitations. A polyvalent vaccine has been developed, but protective immunity takes months to develop and may be directed against only one or two of the seven distinct serotypes. Furthermore, vaccination requires identification of the population at risk. This is straightforward for battlefield troops, but impossible for civilians who could be exposed if the agent was used as a weapon of terror. Widespread immunization is also becoming less attractive since BoNTs are increasingly being used as a therapy for human diseases (2). Vaccination would deprive individuals of subsequent toxin therapy. Alternatively, neutralizing antibodies could be administered prophylactically or therapeutically to the population at risk. Polyvalent equine or human immune globulin protect experimental animals (3) and appear to protect humans (4) against BoNT intoxication. Immune globulin is most effective when administered prior to exposure, but can prevent disease up to 24 hours post exposure depending on the dose and route of exposure (3). With supportive care, immunoglobulin therapy reduces the duration of illness and cost of hospitalization. These studies demonstrate the efficacy of passive immunotherapy, however equine immune globulin has a high incidence of side effects, including serum sickness and anaphylaxis (5). Human immune globulin should prove nontoxic, but requires a source of immunized human plasma donors.

Neutralizing monoclonal antibodies would provide an unlimited amount of antibody of defined specificity and reproducible titer, but to date no efficacious neutralizing monoclonal antibodies have been produced despite "years of effort by several fine laboratories" (3). Potential reasons for this failure include: 1) rarity of B-cells producing neutralizing antibodies in the polyclonal response elicited by available immunogens; 2) Inadequate binding affinity of monoclonals produced to date for neutralization of a toxin with a high affinity ($K_d \sim 1 \text{ nM}$) for its receptor; or 3) the need to block several epitopes on the toxin for neutralization. Furthermore, murine monoclonal antibodies are not ideal therapeutics since they are immunogenic when administered to humans, resulting in decreased efficacy over time and the risk of allergic reactions. Thus the ideal therapeutic would be neutralizing human monoclonal antibodies. In general, however, human monoclonal antibodies have proven extremely difficult to make using conventional hybridoma technology (6) and are frequently IgM and of low affinity.

5.1.2. A novel approach for production of monoclonal antibodies

To overcome the limitations of conventional hybridoma technology, we and others have developed technology which permits generation of recombinant monoclonal antibodies in E. coli (reviewed in (7-9). This approach has proven possible due to three technical achievements. First, the antigen binding V_H and V_L domains of antibodies can be expressed in E. coli, either as Fab fragments or as single chain Fv (scFv) fragments. Second, large and diverse repertoires of Fab or scFv genes can be generated using the polymerase chain reaction (PCR). Third, the scFv or Fab antibody fragments can be expressed on the surface of viruses (phage) that infect E. coli. The resulting phage has the antibody fragment on its surface, anchored to the phage via the coat protein, and contains the gene encoding the antibody inside the phage. Thus the phage mimics the function of the B-lymphocyte, providing a physical linkage between phenotype on the surface and genotype within.

scFv or Fab gene repertoires can be cloned into phage vectors, resulting in the creation of phage antibody libraries. Phage antibodies binding a specific antigen can be separated from non-binding phage by selection on antigen. Phage are incubated with immobilized antigen, non-binding phage removed by washing, and bound phage eluted. A single round of selection will result in a 20 to 1000 fold enrichment for binding phage. Eluted phage are used to infect E. coli, which produce more phage for the next round of selection. Repetition of the selection process makes it possible to isolate binding phage present at frequencies of less than 1 in a billion.

This technology can be applied in a number of ways to produce monoclonal antibodies (10-12). First, it can be used to bypass conventional hybridoma technology. After murine or human immunization, B-lymphocytes are isolated from spleen, bone marrow, or peripheral blood, and the V-genes used to create phage antibody libraries. Binding antibody fragments are isolated by selection on antigen. This approach yields a greater number of antibodies than hybridoma technology, especially for human antibodies. In addition, the V-genes are already cloned and the antibody fragments typically express well in E. coli. This facilitates subsequent genetic engineering, such as creation of diagnostic or therapeutic fusion proteins, or *in vitro* affinity maturation. For therapeutic use, the antibody genes can be subcloned into eukaryotic expression vectors for expression of complete IgG antibodies (13).

Alternatively, it is possible to bypass immunization entirely to produce human antibodies (14, 15). The high transformation efficiency of E. coli allows creation of very large (10^9 to 10^{10} member) phage antibody libraries from human V-gene repertoires. From such libraries, many different antibodies can be isolated against any antigen. The affinities of the phage antibodies are equivalent to affinities of antibodies produced during the secondary immune response, or to affinities of antibodies produced by hybridomas. The same technology can also be used to increase antibody affinity. The sequence of a binding phage antibody is mutated and higher affinity binders selected from the mutant antibody library. Using this approach, the affinity of human phage antibodies have been increased more than 1000 fold, yielding human antibodies with $K_D < 2.0 \times 10^{-11} \, \mathrm{M}$ (16).

5.1.3. Application of phage display to produce neutralizing antibodies to BoNT/A (DAMD17-94-C-4034)

The overall goal of the project is to generate neutralizing monoclonal antibodies for Botulinum neurotoxins type A, B and E (BoNT/A, BoNT/B and BoNT/E). With funding from DAMD17-94-C-4034, we generated phage antibody libraries from mice immunized with BoNT/A $H_{\rm C}$, from mice immunized with BoNT/A $H_{\rm C}$ and boosted with BoNT/A holotoxin and from humans immunized with pentavalent Botulinum toxoid. After selection on either BoNT/A $H_{\rm C}$ or Botulinum holotoxins, a panel of 51 murine and 79 human monoclonal antibodies to

BoNT's were generated (Table 1). We focused on the further evaluation of the 92 monoclonal antibodies which bound BoNT/A. First, we epitope mapped these antibodies with respect to the domain of BoNT/A bound (binding domain (H_C), translocation domain (H_N) or catalytic domain (light chain) (Table 1).

Table 1. Specificity of BoNT binding scFv selected from phage antibody libraries.

	Number of unique scFv					
scFv Specificity	mice immunized with BoNT/A H _C , boosted with BoNT/A	mice immunized with BoNT/A H _C	Humans immunized with toxoid	Non-immune humans	Total scFv	
BoNT/A H _c	10	18	6	10	44	
BoNT/A HN	2	0	4	2	8	
BoNT/A light chain	21	0	16	3	40	
BoNT/B	ND	ND	16	5	21	
BoNT/C	ND	ND	6	5	11	
BoNT/E	ND	ND	3	3	6	
Total	33	18	51	28	130	

Our efforts to identify neutralizing antibodies then focused on the H_C binding antibodies. Work of others had previously shown and verified that prevention of binding of toxin to receptor is the key step in preventing intoxication. The 44 H_C binding single chain Fv (scFv) antibodies were first epitope mapped using surface plasmon resonance in a BIAcore to identify the number of unique epitopes on H_C recognized (Tables 2 and 3, next page).

Antibodies binding 15 unique non-overlapping epitopes were identified (Tables 2 and 3). At least 1 scFv recognizing each epitope was further characterized with respect to binding constant and ability to neutralize BoNT/A in a hemidiaphragm study (Tables 2 and 3). The neutralization studies were done at USAMRICD in the laboratory of Dr. Desphande. This work identified that scFv binding 2 different epitopes on H_C had neutralizing capacity and that coadministration of the two antibodies (either C25 and S25 or C25 and 3D12) had an additive effect on toxin neutralization (Tables 2 and 3 and figures 1 and 2).

From the above results we concluded that:

- 1. After immunization of mice with BoNT/A holotoxin or humans with pentavalent toxoid, only a minority of monoclonal antibodies bind to the protective H_C. This implies that for these immunogens, a large number of antibodies must be studied to identify neutralizers.
- 2. Immunization of mice with BoNT/A HC yields a greater number of neutralizing antibodies.
- 3. Combinations of antibodies recognizing two different epitopes provide greater neutralization than use of a single antibody.
- 4. Dose-response studies indicate that higher scFv concentrations result in greater neutralization. This suggests that higher affinity antibodies will provide more potent toxin neutralization.

Based on these results, we hypothesized that human monoclonal antibodies capable of neutralizing BoNT/A, BoNT/B, and BoNT/E can be produced using phage display. For each serotype, it should be possible to achieve neutralization with either a single antibody, or a small (3 or less) number of antibodies. To achieve these results, we employed the technical objectives described below.

Table 2. Affinities, binding kinetics, and in vitro toxin neutralization results of scFv selected from phage antibody libraries.

scFv clone	Epitope	K _d ^a (M)	k_{on} (x 10 ⁴ M ⁻¹ s ⁻¹)	k_{off} (¥ 10 ⁻³ s ⁻¹)	Paralysis Time ^b
S25	1	7.3 x 10 ⁻⁸	1.1	0.82	85 ± 10^{c}
C25	2	1.1 x 10 ⁻⁹	30	0.33	151 ± 12^{c}
C39	2	2.3×10^{-9}	14	0.32	139 ± 8.9^{c}
1C6	3	2.0×10^{-8}	13	2.5	63 ± 3.3
1F3	4	1.2 x 10 ⁻⁸	92	11	52 ± 1.4
C25 + S25 Combi					218 ± 22^c
BoNT/A pure toxi					56 ± 3.8

a kon and koff were measured by surface plasmon resonance and Kd calculated as koff/kon.

Table 3. Affinities, binding kinetics, and in vitro toxin neutralization results of scFv selected from phage antibody libraries.

introduj indianico					
scFv clone	Epitope	K _d ^a (M)	$k_{\rm on}$ (x 10 ⁵ M ⁻¹ s ⁻¹)	k_{off} (x 10 ⁻³ s ⁻¹)	Paralysis Timeb
Immune Library					
3D12	4	3.69 x 10 ⁻⁸	0.13	0.50	$85 \pm 5.0^{\circ}$
3F10	5	7.80×10^{-9}	0.80	0.62	55 ± 5.0
2B11	6	ND	ND	ND	ND
C25 + 3D12 Coml			`		$179 \pm 2.3^{\circ}$
BoNT/A pure toxi					63.9 ± 2.3
Non-immune Lib					
2A2	7	1.98 x 10 ⁻⁷	2.35	46.7	56.3 ± 9.7
2B10	8	1.29×10^{-7}	5.57	71.6	62.3 ± 6.7
2E6	9	1.93×10^{-7}	1.19	23.0	60.9 ± 8.2
2H6	10	3.86×10^{-8}	2.20	8.50	63.0 ± 5.0
3G11	11	1.07×10^{-7}	0.83	8.88	58.4 ± 4.0
2A9	12	2.61 x 10 ⁻⁸	0.25	0.66	71.0 ± 3.0
2B6	13	7.15×10^{-8}	1.09	7.80	61.9 ± 5.0
3F6	14	6.60×10^{-8}	4.69	30.9	60.4 ± 3.6
3C2	15	3.90×10^{-8}	2.10	82.0	61.9 ± 4.8

 $^{^{\}rm a}$ $k_{\rm On}$ and $k_{\rm Off}$ were measured by surface plasmon resonance and $K_{\rm d}$ calculated as $k_{\rm off}/k_{\rm on}$

ND: Not determined.

b Time (min.) to 50% twitch reduction in mouse hemidiaphragm assay using 20 nM scFv + 20 pM BoNT/A, compared to time for BoNT/A alone. Each value is the mean \pm SEM of at least three observations.

 $^{^{}c}$ p < 0.01 with respect to BoNT/A., d p < 0.05 compared to C25.

b Time (min.) to 50% twitch reduction in mouse hemidiaphragm assay using 20 nM scFv + 20 pM BoNT/A, compared to time for BoNT/A alone. Each value is the mean \pm SEM of at least three observations.

c p<0.01

Figure 1. Evaluation of murine scFv neutralization of BoNT/A in a mouse hemidiaphragm model.


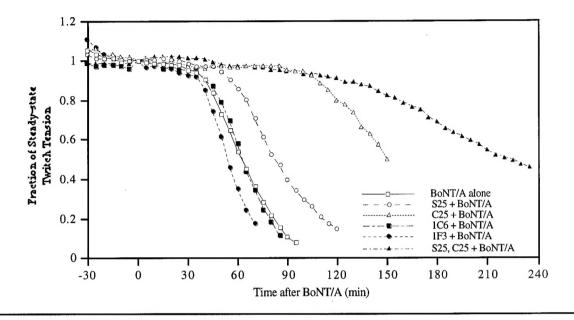


Figure 2. Evaluation of immune and non-immune human scFv neutralization of BoNT/A in a mouse hemidiaphragm model.

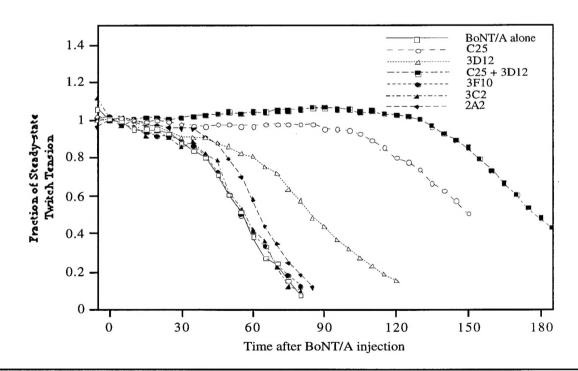

6. Body of Report

The body of the report is categorized according to the technical objectives in the Statement of Work.

- 6.1. Technical objectives 1 and 2: Generate panels of monoclonal single chain Fv antibodies (scFv) that bind BoNT/A, B and E H_C. Characterize BoNT binding scFv.
- 6.1.1. Immunize mice transgenic (Xenomice) for the human Ig locus with BoNT/A, B and E H_c , harvest spleens, prepare RNA.

Fifteen mice were immunized with 10 ug of either BoNT/A, BoNT/B or BoNT/E H_C . Our previous work (and that of others) indicates that H_C is the most immunoprotective domain of BoNT's and thus our choice for immunizations. After three immunizations, mice had titers of 1:1000 to 1:10,000 for binding to the immunizing antigen. Spleens and lymph nodes were harvested from the mice. RNA was prepared from all 15 spleens and from the lymph nodes of 4 of the mice for each antigen.

High quality RNA was obtained from each mouse spleen and lymph nodes for each antigen (figure 3 left panel). Spleen and lymph node RNA was pooled for each antigen. 1st strand cDNA was synthesized from RNA and used as a template for amplification of V_H and V_K genes. This amplification was successful for each antigen. The V_H and V_K genes were spliced together to create scFv gene repertoires (figure 3, right panel). This splicing was also successful for each antigen.

6.1.2. Amplify $V_{\rm H}$ and $V_{\rm L}$ genes, prepare scFv gene repertories, and clone to create Xenomice scFv phage antibody libraries.

scFv gene repertoires from Xenomice immunized with BoNT/A, BoNT/B and BoNT/E H_C were gel purified and reamplified using primers containing appended NcoI (5' end of the gene) and NotI (3' end of the gene) restriction sites. A total of 20 0.5 ml PCR amplifications were performed for each antigen to ensure adequate DNA for library construction. The total yield of DNA was estimated to be 50 ug. Approximately 10 ug of the reamplified repertoires

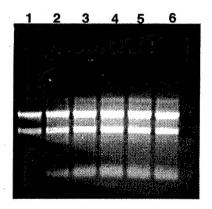




Figure 3. Results of RNA preparation and scFv gene repertoire generation. RNA was prepared from spleens (lanes 1, 3, 5) and lymph nodes (lanes 2, 4, 6) of mice immunized with BoNT/A (lanes 1 and 2), BoNT/B (lanes 3 and 4) or BoNT/E H_C (lanes 5 and 6) (left panel). The 28S and 18S ribosomal bands are clearly evident. V_H and V_K DNA was amplified from RNA and spliced together to obtain an scFv gene repertoire (right panel). Lane $I = M_C$ markers, lane $I = M_C$ digested vector DNA, lane $I = M_C$ gene repertoire, lane $I = M_C$ spliced scFv repertoire before purification, lane $I = M_C$ must be sufficiently and $I = M_C$ must be s

were digested with NcoI and NotI restriction enzymes and gel purified. After digestion and purification the yield was approximately 5 ug. pSYN2 phage display vector DNA was prepared using the CsCl method.

Approximately 100 ug of vector DNA was digested with NcoI and Not and the digested vector gel purified. Trial ligations were set up with varying ratios on scFv gene repertoire insert to vector DNA to identify the optimal ratio for ligation. Based on these results, ligations were scaled up to include 1 ug of insert DNA and 2 ug of vector DNA. Ligation reactions were extracted with phenol/chloroform and ethanol precipitated. Electrocompetent *E. coli* TG1 were prepared and 10 electroporations performed with each of the three ligation mixtures (BoNT/A, BoNT/B and BoNT/E) to generate phage antibody libraries. The electroporations were plated on TYE plates containing ampicillin and 1% glucose and yielding the following number of transformants (ampicillin resistance colonies, Table 4). The percentage of clones containing an scFv sized insert was determined by PCR amplification of colonies containing the plasmid with primers which flanked the scFv cloning site (Table 4). Vector background gave an insert size of 1.5 kb vs 0.7 kb for the scFv gene. Final library size was the product of number of ampicillin resistant colonies and the percentage of colonies with an scFv gene insert. For each of the immunogens, library size was at least 1 million clones.

Table 4. Phage antibody library size using scFv gene repertoires constructed from immunized Xenomice. Number of transformants = number of ampicillin resistance colonies. Corrected library size = (# of transformants) x (# of clones with scFv insert).

Immunogen	# of transformants	# (%) of clones with scFv insert	Corrected library size
BoNT/A HC	3.7×10^6	12/19 (63)	2.3×10^6
BoNT/B HC	2.9×10^6	13/17 (76)	2.2×10^6
BoNT/E HC	3.4×10^6	15/16 (94)	3.2×10^6

To confirm library diversity, the PCR'ed scFv gene inserts from random colonies were digested with the frequently cutting restriction enzyme BstN1 (figure 4). For each of the immunogens (A, B and E), the many different restriction patterns were observed, indicating that the library was diverse.

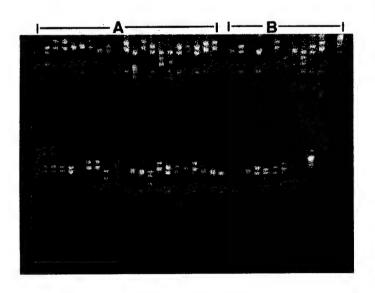


Figure 4. BstN1 restriction fragment analysis of scFv genes amplified from BoNT/A, BoNT/B and BoNT/E phage antibody libraries.

6.1.3. Select Xenomice phage antibody libraries on BoNT/A, B, and E $H_{\rm C}$

To isolate anti-botulinum phage antibodies, the three Xenomice libraries described above were selected on immunotubes coated with either BoNT/A H_C , BoNT/B H_C , or BoNT/E H_C . Tubes were coated with 25 ug/ml of antigen (obtained from Ophidian Inc.). Phage were incubated for two hours, non-binding phage removed by multiple PBS washes, and specifically bound phage eluted by the addition of triethylamine. Eluted phage were used to infect E. coli TG1 and additional phage were prepared for the next round of selection. A second round of selection was then performed. The titers of eluted phage are reported in Table 5, below.

Table 5. Output titers of phage after the first and second round of selection on the indicated BoNT H_C serotype. Titer = number of ampicillin resistance colonies

Immunogen	Input phage titer	Output titer round one	Output titer round two
BoNT/A HC	Approx. 1.0 x 10 ¹²	1.0×10^4	2.2×10^8
BoNT/B HC	Approx. 1.0 x 10 ¹²	3.8×10^{4}	1.2×10^7
BoNT/E HC	Approx. 1.0×10^{12}	1.0×10^{4}	9.0×10^8

The results indicate a significant increase in titer between the first and second round, suggesting that enrichment for BoNT binding phage antibodies has occurred. To verify this, and identify monoclonal BoNT binding phage antibodies, individual colonies from the first and second rounds of selection were picked into 96 well microtitre plates and phage prepared by the addition of helper phage. After overnight growth, bacterial supernatant containing phage antibodies was used directly for a binding ELISA. For ELISA, microtitre plates were coated overnight with either either BoNT/A H_C, BoNT/B H_C, or BoNT/E H_C. Plates were washed and phage added. Binding of phage was detected with anti-M13 horse radish peroxidase. The results of the ELISA are listed below in Table 6.

Table 6. Results of ELISA analysis of 1st and 2nd round of selections Titer = number of ampicillin resistance colonies

Immunogen	Round One, # of positives	Round Two, # of positives
BoNT/A HC	54/96	79/96
BoNT/B HC	13/96	69/96
BoNT/E H _C	47/96	75/96

The results indicate the successful selection of monoclonal human phage antibodies to BoNT/A, BoNT/B, and BoNT/E H_C.

6.1.4. Identify the number of unique antibodies binding BoNT/A, B, and E ${ m H}_{ m C}$

With respect to technical objective one, we are ahead of schedule, as we had predicted that library selection would not be completed until 4 months into fund year 2. Part of the reason for this is that we elected to concentrate on libraries generated from Xenomice, which permit immunization with the optimal immungen (H_C) and generate human antibodies.

Prior to further characterization, the ELISA's described in section 2.3B above were repeated and confirmed. We next wanted to identify which clones not only bound $H_{\rm C}$, but also bound the holotoxin. Phage antibodies were sent to collaborators at USAMRIDD, but due to assay difficulties, we were unable to identify which antibodies bound holotoxin. Rather than wait for further assay development. We proceeded with clone characterization, with the plan that when holotoxin assays were available, we would verify holotoxin immunoreactivity. As a

backup to USAMRIID assays, Dr. Ray Stevens was contacted and he agreed to collaborate with toxin assays. Dr. Stevens lab is approved to work with holotoxin and has quantities of toxin in the lab. To facilitate assay performance, the post-doc working on this project has begun toxoid immunizations.

To estimate the number of different H_C binding scFv isolated, scFv genes from ELISA positive clones were amplified by PCR and the scFv gene digested with the frequently cutting restriction enzyme BstN1. For each of the immunogens (A, B and E), many different restriction patterns were observed, indicating that selected scFv were diverse. Analysis of clones from the second round of selection indicated that at least 22 different binders were isolated for BoNT/A H_C, 22 different binders for BoNT/B H_C, and 17 different binders for BoNT/E H_C (Table 7).

Table 7. Number of different binders against BoNT/A H_c , BoNT/B H_c , BoNT/E H_c as determined by BstN1 fingerprinting.

Immunogen	Round One, # of different scFv	Round Two, # of different scFv
BoNT/A HC	54/96	79/96
BoNT/B HC	13/96	69/96
BoNT/E HC	47/96	75/96

To further characterize the clones as human in sequence, and to correlate the BstN1 fingerprint patterns with the number of sequence unique clones, we began to sequence a number of the ELISA positive anti-BoNT/A $H_{\rm C}$ binding scFv. We focused on serotype A due to previous work on this toxin and the existence on antibodies to this toxin. Our intent is to take these antibodies through to neutralization studies and then return to B and E serotype antibodies.

6.1.4A. Sequencing of V_H and V_K genes of BoNT/A H_C binding scFv

The V_H and V_L genes of 44 anti-BoNT/A H_C scFv were sequenced (Table 8 at the end of this document). All V_H and V_L sequences were human. The V_H genes could be broken down into 11 groups, based on the homology of the V_H CDR3 sequence (Table 8). Three of these groups represented the majority of the sequences analyzed (21, 7, and 7 members respectively, for a total of 35 of the 44 sequences represented). The remaining 8 groups consisted of only 1 or 2 members. This represents a greater number of V_H CDR3 groups than we observed sequencing a similar number of clones from mice immunized with BoNT/A H_C . Significant sequence variability was seen for the V_L genes. Of note, within the same V_H CDR3 grouping, there were examples of pairing with light chains from different V_K gene families.

Twenty-eight of the scFv V_H and V_L genes were assigned to their respective V_H or V_L gene families and then to the germline gene of derivation within the family (Table 9, at the end of this document). Three of the six human V_H gene families were observed (VH1, VH3, and VH4). These represent the most frequently used V_H families. Nine different germline genes were utilized. Four of the six V_K gene families were observed, including the two most frequently utilized in human IgG, V_L 1 and V_L 3. A total of nine different V_K gene members were utilized. Three of the holotoxin binding groups of scFv have been epitope mapped by BIAcore. Each of these bind a non-overlapping epitope. The remaining groups have not yet been epitope mapped. Based on their V_H CDR sequence, it is likely that they recognize unique epitopes.

6.1.5. Analysis of BoNT H_C binding scFv for binding to holotoxin and holotoxinhemagglutinin complex

Phage antibodies were prepared from ninety six clones from the first and second round of selections on BoNT/A H_c , BoNT/B H_c , and BoNT/E H_c . The phage antibodies were transferred

to Dr. Stevens lab for holotoxin and holotoxin-hemagglutin ELISAs. These ELISAs were performed by a Marks lab post-doc in Dr. Stevens BSL 3 facility. For ELISA, plates were coated with the either BoNT/A, BoNT/B, or BoNT/E holotoxin or holotoxin-hemagglutin complex. Positives were scored as those clones that gave a greater than 50% signal above background. The results are reported in Table 10, along with the previous results for binding of phage antibodies to the H_C .

Results were consistent, with the holotoxin positive clones a subset of the HC positive clones, and the complex positive clones a subset of the holotoxin positive clones. This is exactly the pattern of positivity we observed for the murine library we made from normal mice immunized with BoNT/A H_c . When the library is selected on H_c , binders are isolated which bind epitopes that would normally be buried in the holotoxin. Complex binders would be expected to be a subset of the holotoxin binders since a significant portion of the holotoxin is buried in the complex.

The ELISA results obtained for binding to holotoxin and holotoxin-hemagglutinin complex were compared to the sequences on BoNT/A $H_{\rm C}$ binding scFv (Table 11, end of document). Twenty three of the 31 BoNT holotoxin positive clones have been sequenced and between $V_{\rm H}$ and $V_{\rm L}$ sequences, these are 23 unique clones. These represent 9 different $V_{\rm H}$ CDR3 groups.

Table 10. Frequency of binding of phage antibodies by ELISA to BoNT holotoxin, holotoxin-hemagglutinin complex, and $H_{\mathbb{C}^{\bullet}}$

Selection Round	BoNT H _C	BoNT holotoxin	BoNT holotxin- hemagglutinin
BoNT/A, round 1	54/96	1/96	0/96
BoNT/A, round 2	79/96	30/96	13/96
BoNT/B, round 1	13/96	0/96	0/96
BoNT/B, round 2	69/96	17/96	13/96
BoNT/E, round 1	47/96	42/96	34/96
BoNT/E, round 2	75/96	71/96	65/96

6.1.6. Selection of Xenomice libraries on BoNT/A, BoNT/B, and BoNT/E holotoxin and holotoxin-hemagglutinin complex

To obtain additional anti-toxin binding scFv, it was elected to reselect the primary libraries on BoNT/A, BoNT/B, and BoNT/E holotoxin and holotoxin-hemagglutinin complex. It is likely that this would not only leasd to isolation of additional binders, but to isolation of binders with different epitope or fine specificity. These selections were also performed in the Steven's BSL3 facility by a Marks lab post-doc. For selections, immunotubes were coated with the appropriate holotoxin or holotoxin-hemagglutinin complex. Two rounds of selection were performed and the results are reported in Table 12 below.

The increase in titer between the first and the second round suggests that positive selection has occurred for binding to the appropriate antigen (toxin). ELISA results on H_C and holotoxin are pending.

3.1.7. Summary of Technical Objective 1 and 2 Results

We have largely completed technical objectives 1 and 2 during the time frame proposed (two years). Large panels of antibodies were generated to BoNT A, B, and E. The antibodies have been most thoroughly characterized in the case of BoNT A. For BoNT/A, there are at least 23 different holotoxin binding scFv, with at least nine different V_H CDR3 groups. These results compare very favorably to results obtained from mice immunized with BoNT H_C, where only 4 groups of antibodies recognizing 4 different epitopes were obtained. Remaining work for this objective includes determination of the outcome of selections performed on the holotoxin and holotoxin-hemagglutinin complex. This analysis includes determination of the number of positive clones, their DNA sequence, and epitope recognized. This will likely lead to the identification of additional human holotoxin binding antibodies.

Table 12. Results of Xenomouse library selection on BoNT holotoxin and holotoxin-hemagglutinin complex.

Selection antigen	Round One Titer	Round Two Titer	
BoNT/A holotoxin	6.0×10^2	6.0×10^6	
BoNT/A holotoxin complex	9.0×10^{3}	9.0×10^{6}	
BoNT/B holotoxin	6.1×10^2	9.0×10^5	
BoNT/B holotoxin complex	1.4×10^{5}	7.0×10^5	
BoNT/E holotoxin	3.2×10^3	2.0×10^{6}	
BoNT/E holotoxin complex	1.4×10^3	8.0×10^5	

6.2. Technical Objective 3: Develop a system for rapid production of scFv as fusion proteins with immunoglobulin Fc fragment.

We were able to get a jump on this technical objective using funds from the no cost extension of DAMD17-94-C-4034.

To determine the in vivo neutralization capacity of scFv, it was necessary to modify the molecules to prolong the serum half life. To do this, we decided to fuse the scFv to the Fc portion of human IgG1. The resulting scFv-Fc fusion would have a molecular mass of approximately 100 kDa, well above the renal threshold for clearance. The expression host we chose was the methyltrophic yeast *Pichia pastoris*. We chose *Pichia* due to its reported high expression levels of recombinant protein and the relative speed with which the fermentations could be performed (three to five days compared to several weeks for mammalian expression systems). Construction of scFv-Fc fusions also greatly reduced the time necessary to create the genetic constructs for expression. The scFv gene could be simply subcloned intact into the appropriate expression vector. Construction of complete IgG would require subcloning both the VH and VL genes separately. Pichia vectors for co-expression of two chains (as required for IgG) also do not exist, so we would have had to use a mammalian system. Since we wanted to analyze a relatively large number of scFv, it was decided to construct scFv-Fc fusions and use Pichia as the expression host.

6.2.1. Clone and express 3D12, C25. And S25 scFv as scFv-Fc fusions in Pichia pastoris

scFv-Fc fusions were constructed initially for the two murine scFv which showed neutralization capacity in the hemidiaphragm assay (S25 and C25) as well as for the human scFv 3D12 which also showed neutralization capacity in the same assay. Both C25 and S25 were expressed in shake flasks with yields after purification of 1.5 mg/L for C25 and 300 ug/L for S25

Next, we cloned the 3D12 scFv gene for expression as an scFv-Fc fusion in Pichia pastoris. Accordingly, 2 mg of C25 was purified on protein G for in vivo studies. In the case of S25 and 3D12, expression levels are only 250 ug/L. To generate adequate quantities of scFv-Fc for neutralization studies, we have developed fermentation capabilities using a 2L Applikon Bioreactor. 3D12 and S25 were fermented to a wet weight of 350 - 400 g/L and 3 mg of 3D12 and 4 mg of S25 purified using protein G. Approximately 2 mg each of S25, C25 and 3D12 were sent to Ms. Terry Smith at USAMRIID to perform in vivo neutralization studies.

This technical objective was successfully completed.

6.3. Technical Objective 4: Confirm that monoclonal 3D12, C25, and S25 scFv-Fc fusions neutralize BoNT in vivo.

To determine neutralization capacity *in vivo*, mice were injected intraperitoneally either with 20 or 100 LD50s of BoNT/A alone or mixed with 50 ug of either C25 scFv-Fc or S25 scFv-Fc or a combination of C25 and S25 scFv-Fc fusions. The results are shown in figure 5. At the lower does of toxin (20 LD50s), there was significant prolongation of the time to death for each individual scFv-Fc fusion (right panel). Without antibody, all mice were dead by 24 hours. In contrast 6/6 mice receiving toxin plus S25 fusion were alive and 4/6 mice receiving C25 were alive at 24 hours.

Survival decreased with increasing time from antibody and toxin administration. At the higher dose of toxin (100 LD50s), only a minor prolongation is seen with either C25 or S25 scFv-Fc fusions compared to toxin alone (figure 5, right panel). When combined, the scFv-Fc fusions significantly prolong the time to death compared to when administered alone. Thus the in vivo results recapitulate the in vitro neutralization studies with respect to the additivity of monoclonals and toxin neutralization.

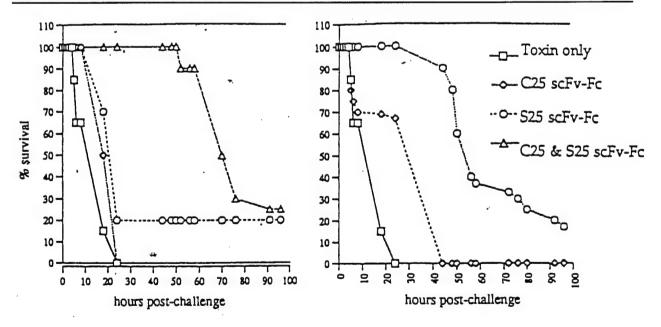


Figure 5. Results of in vivo toxin neutralization by C25 and S25 scFv-Fc fusions. Mice were injected intraperitoneally (i.p.) with 20 or 100 LD50s of toxin or toxin plus one or both of the scFv-Fc fusions. Right panel = 20LD50s of toxin, left panel = 100 LD50s of toxin.

The results described above showing additivity of toxin neutralization by a pair of monoclonal antibodies led us to hypothesize the existence of either two receptor 'binding sites' on H_C or a broad binding surface (also hypothesized by others). Neutralization would require

blocking both sites. To test this hypothesis, we wanted to confirm the additivity of the two antibodies already studied which have an additive effect (C25 and S25). We also wanted to study an additional antibody which has in vitro neutralizing capacity (3D12) which binds to the same epitope as S25. Thus in the next neutralization study, we planed to determine the neutralization capacity of 3D12 alone, C25+S25, C25 + 3D12 and S25 + 3D12.

To determine neutralization capacity *in vivo*, mice were injected intraperitoneally either with 20 or 100 LD50s of BoNT/A alone or mixed with 50 ug of either 3D12, or a combination of C25 and S25 scFv-Fc fusions, C25 and 3D12 scFv-Fc fusions or S25 and 3D12 scFv-Fc fusions. The results are shown in figure 6. At either does of toxin (20 or 100 LD50s), there was significant prolongation of the time to death with 3D12 scFv-Fc fusions (left panel). Without antibody, all mice were dead by 20 hours (20 LD50s) or 12 hours (100 LD50s). This is comparable to results observed for S25 or C25 scFv-Fc fusions (see results above). The combination of C25 and S25 gave similar results to those previously observed (prolongation of time to death, with 30% of mice surviving) (right panel). For 3D12 and C25 combined, 70% of mice survived 100 LD50s. To our surprise, all mice receiving the combination of 3D12 and S25 survived 100 LD50s.

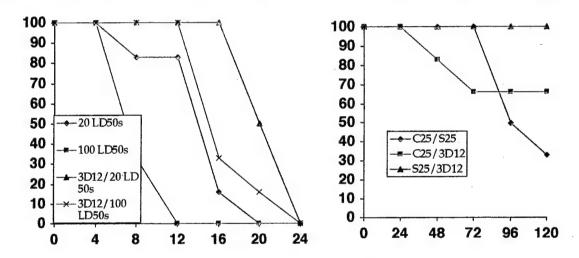


Figure 6. Results of in vivo toxin neutralization by 3D12, C25 and S25 scFv-Fc fusions. Mice were injected intraperitoneally (i.p.) with 20 or 100 LD50s of toxin or toxin plus one or both of the scFv-Fc fusions. Left panel = toxin controls and 3D12 scFv-Fc fusion. Right panel = 100 LD50s of toxin plus pairs of scFv-Fc fusions.

This result was surprising because our earlier studies with epitope mapping suggested that 3D12 and S25 recognize largely overlapping epitopes. This epitope mapping was performed using surface plasmon resonance in a BIAcore where the amount of binding was determined for either antibody alone and compared to the amount bound when the antibodies were co-injected. This type of analysis does not actually determine whether both antibodies can bind toxin at the same time. We therefore repeated the epitope mapping of 3D12, C25 and S25, by immobilizing the 3D12 scFv-Fc fusion on a BIAcore chip. We then injected BoNT/A H_C and observed it bind (see figure 7 below). After BoNT/A H_C was bound, we then injected either 3D12 (as a negative control) S25 or C25 scFv-Fc fusions. The results (figure 7) indicate that when BoNT/A H_C is bound by 3D12, either S25 or C25 can also bind. This demonstrates that each of these antibodies recognize non-overlapping epitopes. The *in vivo* toxin neutralization results confirm the additivity of toxin neutralization by pairs of monoclonal antibodies and suggest two separate receptor binding sites both of which must be blocked for potent toxin neutralization. For the first

time, we observed complete protection of mice from 100 LD50s with the combination of S25 and 3D12 scFv-Fc fusions.

To confirm the toxin neutralization of the 3D12 and S25 scFv-Fc fusion combination and define the upper limit of toxin neutralization. Thus we re-expressed S25 and 3D12 scFv-Fc fusions from P. pastoris, purified then by Protein G affinity chromatography and gel filtration and confirmed their immunoreactivity both by ELISA and by BIAcore analysis. Both these assays confirmed that the scFv-Fc fusions were active. Purified scFv-Fc fusion protein was delivered to Ms. Theresa Smith at USAMRIID for in vivo neutralization studies in mice. The ability of an equimolar mixture of S25 and 3D12 scFv-Fc fusion protein to neutralize 100 mouse LD50s was confirmed, with 2/3 of the mice completely protected against death from toxin injection and the remainder of the mice showing a significant delay in time to death (figure 8). At 1000 LD50s, there was an approximately two fold delay to time of death of the mice.

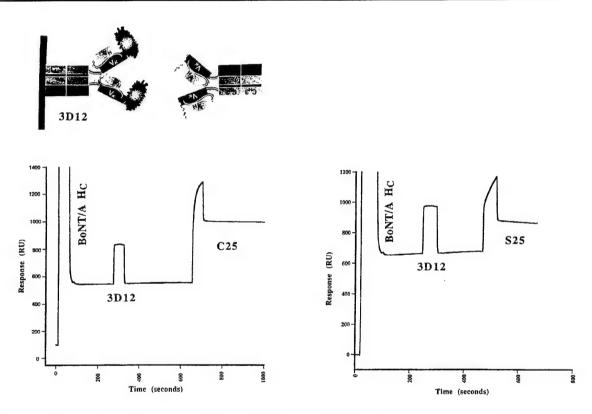


Figure 7. Epitope mapping of 3D12, C25 and S25 scFv-Fc fusions using BIAcore. 3D12 scFv-Fc fusion was covalently coupled to the chip surface (upper cartoon). BoNT/A H_C was injected and approximately 500-600 RU bound. Injection of 3D12 (negative control) showed no binding, while either C25 or S25 could bind.

To examine potential mechanisms for the failure of complete protection of single scFv-Fc, and the delay but not prevention of death with multiple scFv-Fc used at higher LD50s, we determined the pharmacokinetics of scFv-Fc fusions in mice. To determine the pharmacokinetics of scFv-Fc fusions in mice, the C25-Fc fusion protein was radiolabelled and administered to mice in 20 ug doses, both intravenously and intraperitoneally. Figure 9 shows that the C25-Fc fusion had dramatically prolonged serum perseverance whether administered intravenously or intraperitoneally, with a $t_{1/2}$ for the beta phase of 52 and 93 hours for i.v. or i.p. administration respectively. This compares to only 2.5 to 3.5 hours for the scFv. The increased retention of the scFv-Fc fusions can be attributed to the increased size of the scFv-Fc homodimer

which places the mass above the renal threshold. However, the serum level maintained over time by the scFv-Fc fusions is only 20-25% of that achieved by IgG. This is related to the pattern of *Pichia pastoris* glycosylation, which leaves high mannose which can be rapidly cleared by mannose receptors resulting in a decreased serum level. This marked decrease in half life could explain failure to observe more potent toxin neutralization.

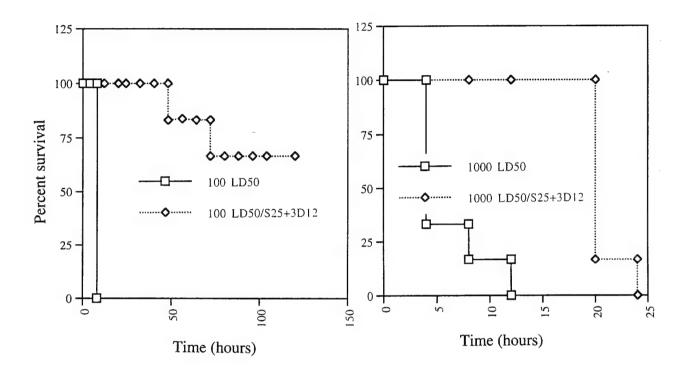


Figure 8. Results of in vivo toxin neutralization by 3D12 and S25 scFv-Fc fusions. Mice were injected intraperitoneally (i.p.) with 100 or 1000 LD50s of toxin or toxin plus a mixture of the two scFv-Fc fusions. Left panel = 100 LD50s. Right panel = 1000 LD50s.

6.3.1. Construction of additional Pichia pastoris expression vectors

While not one of original technical objectives, the results above indicated a need to attempt to alter the Pichia expression vector to eliminate Fc glycosylation in order to increase the serum half-life. Thus, we attempted to increase the serum level by removing the single glycosylation site on the human Fc by site directed mutagenesis. At the same time, we wanted to engineer the leader sequence of the Pichia expression vector so that we can directly subclone the scFv gene for expression as an Fc fusion directly from the phage display vector rather than use PCR. This eliminates the need to sequence after subcloning and should save considerable time. First, we removed an NcoI site from the pPIg1 vector backbone and introduced an NcoI site into the leader sequence using site directed mutagenesis to create pPIg2. A correct clone was identified by restriction analysis followed by DNA sequencing. We then removed the single N-linked glycosylation site from the Fc part of the molecule. Again, a correct clone was identified by DNA sequencing.

The C25 scFv gene was subcloned into pPIg3, the engineered Pichia pastoris expression vector containing Nco1-Not1 restriction sites for scFv subcloning and with the Fc glycosylation site removed by site directed mutagenesis. A clone containing the correct C25 scFv gene insert

was identified by DNA sequencing. C25 scFv-Fc fusion was expressed and purified by Protein G affinity chromatography followed by gel filtration. SDS-PAGE indicated a single band of the appropriate size. Successful elimination of glycosylation was confirmed by digesting purified scFv-Fc fusion with PNGase F. SDS-PAGE indicated ni difference in the size of the band before and after treatment with PNGase F. In contrast, treatment of purified C25 scFv-Fc fusion where the gylcosylation site had not been removed showed a significant decrease in size by SDS-PAGE after treatment with PNGase F. We interpret these results to indicate successful removal of Fc glycosylation. Purified fusion protein was shipped to Dr. Greg Adams at Fox Chase Cancer Center for *in vivo* determination of pharmacokinetics.

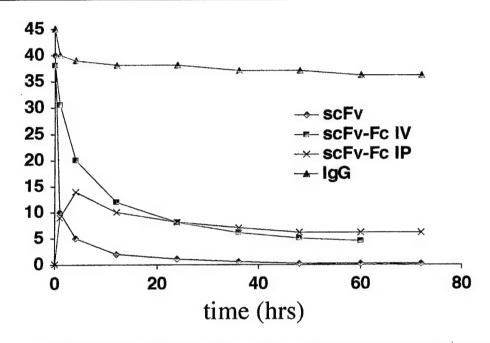


Figure 9. Biodistribution of scFv, scFv-Fc fusions and IgG injected into mice either intravenously or intraperitoneally.

Deglycosylated C6.5 scFv-Fc fusion protein was shipped to Greg Adams at Fox Chase Cancer Center for pharmacokinetic studies. The scFv-Fc fusion was radiolabelled with iodine and immunoreactivity verified. The pharmacokinetic data are plotted in figure 10. The measured volume of distribution was 14.6 with a $t_{1/2}\beta$ of 36.09 hours. This is essentially the same as the $t_{1/2}\beta$ of the glycosylated scFv-Fc fusion ($t_{1/2}\beta$ of 37.31 hours), however the volume of distribution of the glycosylated form was significantly less at 6.7. The volume of distribution data suggest that glycosylation helps prevent the extravasation of the antibody from the vasculature. The net result of the data is that the area under the concentration vs time curve for the deglycosylated scFv-Fc is in fact lower than the glycosylated form. As a result, the t1/2 is still quite short compared to complete IgG and the remaining injected dose is only 5% after 12 hours (compared to 40% for IgG). As a result, we will need to construct full length IgG from the scFv V_H and V_L genes in order to accurately assess in vivo toxin neutralization.

6.3 Construction of fully human IgG1 antibodies from neutralizing scFv

Complete IgG are being constructed from the V-genes of the neutralizing scFv S25, C25, and 3D12.

The V_H genes of the neutralizing scFv S25, C25, and 3D12 were PCR amplified from the appropriate plasmid, digested with Mlu1 and Nhe1 and ligated into N5KG1 vector digested with the same enzymes. Clones containing the correct size insert were identified by PCR screening. Two clones from each ligation having an appropriate sized insert were subjected to DNA sequencing. In this manner, clones containing the correct V_H gene of S25, C25, and 3D12 were identified. Vector DNA containing the S25, C25, or 3D12 VH gene was prepared digested with DraIII and BsiW1 and gel purified. The V_k genes of S25, C25, and 3D12 were amplified by PCR, digested with DraIII and BsiW1 and gel purified. The V_{κ} genes of S25, C25, and 3D12 were ligated into N5KG1 containing the appropriate V_H gene. Clones containing the correct size for a V gene were identified by PCR screening. Two clones from each ligation were sent for DNA sequencing of the V_{κ} gene and clones containing the correct V_{κ} gene were identified. Large scale plasmid DNA preparations were performed and we have begun electroporations of CHO cells to establish stable cells lines expressing C25, S25, and 3D12 IgG. We have also begun subcloning the $V_{\rm H}$ and V_{κ} genes from each anti-BoNT/A scFv obtained from Xenomice with unique V_H CDR3s (see Table 11 for clone names). For V_H CDR3 groups containing multiple members, we will screen multiple members by BIAcore to identify those with the slowest off rates (highest affinity). The highest affinity clone will be selected for IgG construction. In this manner, a panel of anti-BoNT/A IgG will be generated for evaluation for in vivo toxin neutralization.

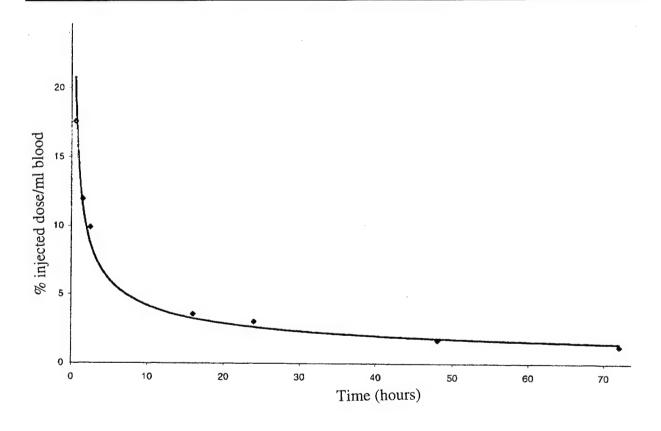


Figure 10. Biodistribution of deglycosylated scFv-Fc fusion injected into mice intravenously.

6.3 Summary of Technical Objective Four

Technical objective four was achieved, with demonstration that: 1) scFv that neutralized toxin in vitro also neutralized toxin in vivo; and 2) neutralization was additive when neutralizing

antibodies were combined. Use of scFv-Fc fusions expressed from Pichia pastoris did allow in vivo demonstration that scFv could neutralize. However, the serum half lives of the scFv-Fc fusions, even with the glycosylation site removed, prevented accurate demonstration of the potency of neutralization. Serum levels at greater than 24 hours were 5 to 10 times less than would be observed with IgG. In order to accurately assess in vivo neutralization, it has proven necessary to construct fully human IgG. While takes much longer than use of scFv-Fc fusions, it is necessary. In addition, it will ultimately be required for generation of therapeutic antibodies, and was in fact encompassed in Technical Objective 6 to be performed in Year 3.

6.4. Technical Objective 5: Determine the relative importance of affinity in achieving high titer BoNT neutralization

Beginning this objective was contingent on identifying and confirming the neutralization efficacy of a single monoclonal antibody. Since no potently neutralizing single monoclonal was identified, this objective was deferred. We will perform this Technical Objective in year 5, once we have results from in vivo neutralization studies of IgG based antibodies

7. Key Research Accomplishments

- 7.1 Immunization of Xenomice with BoNT/A, B, and E H_{C} .
- 7.2 Successful RNA preparation from Xenomice immunized with BoNT/A, B, and E H_C.
- 7.3 Construction of phage antibody libraries from Xenomice immunized with BoNT/A, B, and E H_C .
- 7.4 Isolation of a panel of human monoclonal antibody fragments from phage libraries constructed from Xenomice immunized with BoNT/A, B, and E H_C.
- 7.5 Detailed characterization of 23 anti-BoNT/A scFv from Xenomice libraries with respect to DNA sequence and epitope recognized.
- 7.5 Construction of a Pichia expression vector for expression of scFv-Fc fusions.
- 7.6 Expression and purification of two murine (C25 and S25) and one human (3D12) scFv-Fc fusions.
- 7.7 Demonstration that C25, S25 and 3D12 scFv-Fc exhibit in vivo toxin neutralization and that a combination of two of the scFv-Fc fusions can neutralize 100 toxin LD50s.
- 7.8 Demonstration that scFv-Fc fusions have significantly longer in vivo half lives than scFv, but that Fc glycosylation results in the Fc having a significantly shorter half life than IgG.
- 7.9 Construction of a scFv-Fc expression vector where the Fc glycosylation site is removed.
- 7.10 Demostration that removal of the glycosylation site does not significantly prolong the serum half life of scFv-Fc fusion proteins.
- 7.11 Complete construction of fully human IgG from V genes of neutralizing scFv S25, C25, and 3D12.
- 7.12 Begin establishment of stable cell lines expressing S25, C25, and 3D12 IgG.
- 7.13 Begin construction of fully human IgG from V genes of anti-BoNT/A scFv from Xenomice.

8. Reportable Outcomes

- 8.1 In press manuscript:
- 8.2 Powers DB, Amersdorfer P, Poul M-A, Shalaby MR and Marks JD. Expression and characterization of single-chain Fv-Fc fusions in Pichia pastoris. J. Imm Meth. In press.

8.3 Submitted manuscript:

Amersdorfer P, Wong C, Smith T, Chen S, Desphande S, Sheridan R, and Marks JD. Genetic and immunologic comparison of anti-botulinum type A antibodies from immune and non-immune human phage libraries'. Submitted.

8.4 Patent Application:

Marks JD and Amersdorfer P. Therapeutic monoclonal antibodies that neutralize botulinum neurotoxins.

8.5 Degrees Obtained:

Peter Amersdorfer, Ph.D.

9. Personnel supported by the contract

James D. Marks M.D., Ph.D

Peter Amersdorfer Ph.D.

Caili Wang Ph.D.

Agnes Nowakowski

Coral Ho

10. Conclusions and Future Work

During the two years we have made considerable progress towards our goal of generating human monoclonal antibodies which can neutralize Botulinum neurotoxins A, B, and E. Progress has proceeded on two fronts: 1) generation of a large panel of human antibodies from mice transgenic for the human Ig locus immunized with toxin $H_{\rm C}$ and 2) demonstration that scFv phage antibodies previously generated from phage libraries can successfully neutralize toxin.

On front one, we have largely achieved the first two years technical objectives 1 and 2, with successful construction and selection of phage antibody libraries made from mice immunized with A, B, and E $\rm H_{\rm C}$ and detailed characterization of 23 anti-BoNT/A binding scFv. These 23 scFv cluster into 9 different $\rm V_{\rm H}$ CDR3 groups (likely representing 9 unique epitopes). This is suggested by the fact that epitope mapping of three of these groups yielded 3 different epitopes. There remain an additional 10 clones to sequence as well as the results of selections on holotoxin to analyze. This is likely to yield additional anti-BoNT A antibodies. Note that libraries constructed from mice that were not transgenic for the human Ig locus yielded only 18 different antibodies with only 5 different $\rm V_{\rm H}$ CDR3 groups. Since the libraries from non-transgenic mice yielded antibodies with neutralizing activity, it is very likely that some of the current antibodies from Xenomice will have neutralizing activity.

It is anticipated that early in fund year 3, selections on holotoxin will be completely analyzed for binding and all the binding clones characterized with respect to, epitope recognized and DNA sequence. This will give us a large panel of human antibodies to BoNT/A which can be evaluated for toxin neutralization. We will also now sequence all antibodies from selections on BoNT/B $H_{\rm C}$ and holotoxin, as well as BoNT/E $H_{\rm C}$ and holotoxin that bind their respective holotoxins.

On front two, we achieved technical objectives 3 and 4. A Pichia expression vector was constructed which permitted successful expression and purification of scFv-Fc fusions and these fusions had a significantly longer in vivo half life than scFv. The prolonged half life allowed the demonstration that the three scFv which neutralize toxin in vitro neutralize toxin in vivo. Moreover, a combination of two antibodies recognizing separate toxin epitopes leads to more potent toxin neutralization. This result confirms our in vitro work and suggests two toxin

binding sites on receptor(s). Unfortunately, the pharmacokinetics of the scFv-Fc fusions still yield a significantly shorter serum half life than IgG, even after removal of the glycosylation site. This precludes adequate analysis of neutralization potency. As a result, we have constructed fully human IgG from the V-genes of the neutralizing 3D12, S25, and C25 scFv. We are also constructing full length human IgG from the V-genes of Xenomice scFv that bind BoNT/A holotoxin. IgG will be constructed from a member of each V_H CDR3 cluster that exhibits holotoxin binding. Stable expressing cell lines will be established, IgG purified, and supplied to collaborators at USAMRIID for in vivo toxin neutralization studies. This is essentially Technical Objective 6 planned for Year 3. We also anticipate that once we identify a potently neutralizing antibody, we can generate affinity mutants and fulfill Technical Objective 5.

11. References

- 1. United Nations Special Commission on Iraq Report.
- Cardoso, F. and Jankovic, J. Clinical use of botulinum neurotoxins. (1995). Curr. Topics Microbiol. Immunol. 195: 123-141.
- 3. Middlebrook, J.L. and Brown, J.E. Immunodiagnosis and immunotherapy of tetanus and botulinum neurotoxins. (1995). Curr. Topics Microbiol. Imm. 195: 89-122.
- 4. Tacket, C.O., Shandera, W.X., Mann, J.M., Hargrett, N.T., and Blake, P.A. Equine antitoxin use and other factors that predict in type A foodborne Botulism. (1984). Amer. J. Med. 76: 794-798.
- 5. Black, R.E. and Gunn, R.A. Hypersensitivity reactions associated with botulinum antitoxin. (1980). Am. J. Med. 69: 567-570.
- 6. James, K. and Bell, G.T. Human monoclonal antibody production: current status and future prospects. (1987). J. Immunol. Methods. 100: 5-.
- 7. Marks, J.D., Hoogenboom, H.R., Griffiths, A.D., and Winter, G. Molecular evolution of proteins on filamentous phage: mimicking the strategy of the immune system. (1992). J. Biol. Chem. 267: 16007-16010.
- 8. Hoogenboom, H.R., Marks, J.D., Griffiths, A.D., and Winter, G. Building antibodies from their genes. (1992). Immunol. Rev. 130: 41-68.
- 9. Marks, J.D. and Marks, C.B. Phage libraries-a new route to clinically useful antibodies. (1996). N. Engl. J. Med. 335: 730-734.
- 10. Clackson, T., Hoogenboom, H.R., Griffiths, A.D., and Winter, G. Making antibody fragments using phage display libraries. (1991). Nature. 352: 624-628.
- 11. Burton, D.R., Barbas, C.F., Persson, M.A.A., Koenig, S., Chanock, R.M., and Lerner, R.A. A large array of human monoclonal antibodies to type 1 human immunodeficiency virus from combinatorial libraries of asymptomatic individuals. (1991). Proc. Natl. Acad. Sci. USA. 88: 10134-10137.
- 12. Zebedee, S.L., Barbas, C.F., Hom, Y., Caothien, R.H., Graff, R., Degraw, J., Pyati, J., LaPolla, R., Burton, D.R., Lerner, R.A., and Thronton, G.B. Human combinatorial antibody libraries to hepatitis B surface antigen. (1992). Proc. Natl. Acad. Sci. 89: 3175-3179.
- 13. Orlandi, R., Gussow, D.H., Jones, P.T., and Winter, G. Cloning immunoglobulin variable domains for expression by the polymerase chain reaction. (1989). Proc Natl Acad Sci U S A. 86: 3833-7.
- 14. Marks, J.D., Hoogenboom, H.R., Bonnert, T.P., McCafferty, J., Griffiths, A.D., and Winter, G. By-passing immunization: Human antibodies from V-gene libraries displayed on phage. (1991). J. Mol. Biol. 222: 581-597.
- 15. Vaughan, T.J., Williams, A.J., Pritchard, K., Osbourn, J.K., Pope, A.R., Earnshaw, J.C., McCafferty, J., Hodits, R.A., Wilton, J., and Johnson, K.S. Human antibodies with subnanomolar affinities isolated from a large non-immunized phage display library. (1996). Nature Biotechnology. 14: 309-314.
- 16. Schier, R., Bye, J.M., Apell, G., McCall, A., Adams, G.P., Malmqvist, M., Weiner, L.M., and Marks, J.D. Isolation of high affinity human anti-c-erbB-2 single chain Fv using affinity driven selection. (1996). J. Mol. Biol. 255: 28-43.

Table 8. Deduced protein sequences of heavy and light chain variable regions of BotNT/A Hc binding scFv.

Heavy chains

Eramework 1 QLVQSGGGVVRPGGSLF	Eramework 1 QVQLVQSGGGVVRPGGSLRLSCAASGFIFD	CDR1	Framework 2	CDR2 TINWNGGNTGYADSVKG	Eramework 3 RFTISRDNAKNSLYLQMNSLRAEDTALLYHCAR	CDR3 EGDYGGLYFDY	Framework 4
EVQLVESGGGVVQPGRSL QQRG QLQ	EVQLVESGGGVVQPGRSIRLSCAASGFTFS QQ	SYGMH	WVRQAPGKGLAWVA	VISYAGSNKYYADSVTGW-D	RFTLSRDNSKNTLYLQMNSLRAEDTAVYYCARIIIIIII	DWDLYGMDV -Y-F -Y-F -Y-F	WGQGTTVTVSS
1 1 1 1				-Y		-YF	
1 1 1						-YF	
1 1 1 1					I	- Y F	
	Λ			W-D		Y F Y Y Y Y Y Y	
	QVQLVQSGAEVKKPGASVKVSCKASGYTFT	GYYIH	WVRQAPGQGLEWMG	WINPDSGGTNYAQKFQG	RVTMTRDTSISTAYMELSRLRSDDTAVYYCAR	DDWINGSYYYYGMDV	WGQGTTVTVSS
	EVQLVESGGGVVQPGRSLRLSCAASGFTFS	SYGMH	WVRQAPGKGLEWVS	YISSSSTIYYADSVKG	RFTISRDNAKNSLYLQMNSLRDEDTAVYYCAR	IYSYGFWYYYGMDV	WGQGTTVTVSS
	EVQLLESGGGLVQPXGVLRLSCAASGFTFS EVQLVESGPGLVKPSETLSLTCIVSGGSIS	SYAMS	WVRQLPGKGLEWVS WIRQPAGKGLEWIG	AISGSGGSTDYADSVKG RIYTSGSTDYNPSHKS	RFTISRDNSKNTLYLOMNSLRAEDTAVYYCAK RVTMSVDTSKNOFSLKLNSVTAADTAVYYCAR	DDSNLYYYHYGLDV EGVGSWYFDL	WGQGTTVTVSS WGRGTLVTVSS
	QVQLVQSGGGVVQPGRSLRLSCAASGFTFS	SYGMH	WVRQAPGKGLEWVA	VISYDGSNKYYADSVKG	RFTISRDNSKNTLYLQMNSLRAEDTAVYYCAR	GSSGWYGPDYYGMDV	WGQGTMVTVSS
	QVQLVQSGGGMVQPGRSLRLSCAASGFTFS EVOLOESGGGLVOPGGSLRLSCAASGFTGS	SYGMH	WVRQAPGKGLE*VA WVROAPGKGLEWVS	VISYDGSKKYYADSVKG AISGSGGSTYYADSVKG	RFTISRDNSKNTLYLQMNSLRAEDTAVYYCAR RFTISRDNSKNTLYLOMNSLRAEDTAVYYCAR	DLENWRYYYYGMDV	WGQGTTVTVSS
	QVQLVQSGGGVVQPGRSLRLSCAASGFTFS	SYGMH	WVRQAPGKGLEWVS	SISSSSYIYYADSVKG	RFTISRDNSKNTLYLQMNSLRAEDTAVYYCAR	GAVAGGSYGMDV	WGQGTMVTVSS
144	QVQLVESGGGVVQPGGSLRLSCAASGFTFS	NAWMS	WVRQAPGKLEWVG	HIKSKTDGGTTDYTAPVKG	RFTISRDDSKNMLYLQMNSLKSEDTAVYYCTT	DYDFWSGYSYGFDI	WGQGTMVTVSS

Clone	Framework 1	CDR1	Framework 2	CDR2	Framework 3	<u>CDR3</u>	Framework 4
A2-B2 A2-E8 A2-C5 A2-D1 A2-B4 A1-B3	EIVLTQSPSSLSASVGDRVTITC	RASQSVSSYLA	WYQQKPGQAPRLLIY	GASSRAT	GIPDRFSGSGSGTDFTLTISRLEPEDFAVYYC	QQYSNSPLT	FGGTKVDIKR
A2-G5 A2-C8 A2-C8 A1-B12 A2-C4 A2-C7 A2-B9 A2-B9 A2-B10 A2-B10 A2-B10 A2-C1	DIVMTQSPSSLSASVGDRVTLTCXX	RARQRLSSWLAS-G	WFPQHPGKAPPLLIY	AASSLQS	GVPSRFRGRGSGPDFTLTISSLPPEDFATYYCK-S-STQ GVPDRFSGSGSGTDFTLKISRVEAEDVGVYYC	HPANSFPLP QQT MQALQTPLT	FGGGTKVEIKR
A2-F7 A1-E7 A2-B4 A2-B11 A2-D7* A2-D12	XX-XSFG* DIVMTQSPDSIAVSLGERATINC	KSSQSVLYSSNNKNYLA	WYQQKPGQPPKLLIY	WASTRES	GVPDRFSGSGSGTDFTL/TISSLOPEDFATYYC	QQANSFPLT	FGGGTKVDIKR
A2-B7 A1-B7 A2-H7 A2-D6 A2-B6 A2-B10 A2-B10	EIVLTQSPSSLSASVGDRVTITC	RASQSISSYINGWLAGN-AGW-AG-RND-G	WYQQKPGKAPKLLIY	AASSLQS	GVPSRFSGSGSGTDFTLTISSLQPEDFATYYC	QQSYSTPLTAN-X	FGGGTQVEIKRT-DKKK
A2-C10 A1-C4	DIVMTQSPLSLPVTPGEPASISC -V	RSSQSLLHSNGYNYLD	WYLQKPGQSPQLLIY	LGSNRAS	GVPDRFSGSGSGTDFTLKISRVEAEDVGVYYC	MQALQTLT PLT	FGGGTKVEIKR L
A1-E1	EIVLTQSPSSLSASVGDRVTITC	RASQSISTYLN	WYQQKPGKAPKLLIY	AASSLQS	GVPSRFSGSGSGTDFTLTISSLQPEDFATYYC	QQSYSTPLT	FGGGTKVEIKR
A2-C12 A1-C7	DIVMTQSPSSLSASVGDRVTITC	RASQSISRYLN	WYQQKPGKAPKLL*Y	AASSLQS	GVPSRFSGSGSGTDFTLTINSLEAEDAATYYC	HOSSSLPOT	FGQGTTVEITR
A2-D9	DOMTQSPSSLSASVGDRVTITC	RASQGISNYLA	WFQQKPGKAPKSLIY	AASSLOS	GVPSKFSGSGSGTDFTLTISSLQPEDFATYYC	QQYNSYPLT	FGGGTKVEIKR
A1-E8 A2-A9	EIVLIQSFAILDSVSFGEARAILDSC DIQMTQSPDSLAVSLGERATINC	KSSQSVLYSSNNKNYLA	WYQQKPGQPPKLLIY	WASTRES	GVPDRFSGSGSGTDFTLTISSLQAEDDVAVYYC	QQYYSTPLT	FGGGTKLEIKR
A2-E11	DIQMTQSPSSLSASVGDRVTITC	RASQSISSYLN	NWQQKPGKAPKLLIY	AASSLQS	GVPSRFSGSGSGTDFTLTISSLQPEDFATYYC	QQSYSSPLT	FGGGTKVEIKR

CLONE	BstNI	CDR3-H	CDR3-L	Hc ELISA	Holotoxin ELISA	Complex ELISA
A1-E1	10	DDSNLYYYHYGLDV	QQSYSTPLT	(+)	(-)	(-)
10 010	-	DDIAR II (OO) AAAA (OMD) (OO A DOEDIT	(.)		/ /
A2-B10	6	DDWNYGSYYYYYGMDV	QQADSFPIT	(+)	(-)	(-)
A1-B7	17	DDWNYGSYYYYYGMDV	QQANSFPLT	(+)	(-)	(-)
A2-E1	?	DDWNYGSYYYYYGMDV	QQSYRTPLT	(+) N/A	(-)	(-)
A2-H6	7	DDWNYGSYYYYYGMDV	QQSYRTPLT	N/A	(+)	(-)
A2-B7	6	DDWNYGSYYYYYGMDV	QQSYSTPLT	(+)	(-)	(-)
A2-H7	2	DDWNYGSYYYYYGMDV	QQSYSTPSY	(+)	(-)	(-)
A2-D6		DDWNYGSYYYYYGMDV	QQSYSTPVT	N/A	(-)	(-)
A2-D9	4	DLENWRYYYYYGMDV	QQYNSYPLT	(+)	(+)	(+)
A1-E8	19	DRAVAGFHYYYGLDV	QQYNNWPRT	(+)	(-)	(-)
A2-G5	1	DWDLYGMDV	HPANSFPLP	(+)	(+)	(+)
A2-F7	2	DWDLYGMDV		(+)	(+)	(-)
A2-C8	1	DWDLYGMDV	MQALQTPLT	(+)	(-)	(-)
A2-G6	7	DWDLYGMDV		(+)	(+)	(-)
A2-E11	5	DYDFWSGYSYGFDI	QQSYSSPLT	(+)	(+)	(-)
A2-B3	1	DYDLFGMDV		(+)	(-)	(-)
A2-D3 A2-C1	2	DYDLFGMDV		(+)	(+)	(-)
A2-D11	14	DYDLFGMDV				(-)
A2-D11 A2-H10	1	DYDLFGMDV	MLALQTPLT	(+)	(-)	(-)
A2-H10 A2-E7		DYDLFGMDV		(+)		
	+ -		MQALQTPFT	N/A	(-)	(-)
A2-C7	4	DYDLFGMDV	MQALQTPIT	(+)	(-)	(-)
A2-B9 A1-B9	1	DYDLFGMDV	MQALQTPLT	(+)	<u>(+)</u>	(-)
A1-B9 A1-B12	4	DYDLFGMDV	MQALQTPLT	(+)	(-)	(-)
A1-612 A2-C4	7	DYDLFGMDV DYDLFGMDV	MQALQTPLT MQALQTPLT	(+)	(-)	(-)
A2-C4 A2-C9	7	DYDLFGMDV	MQTLQTPWT	(+) (+)	(-)	(-)
A2-09 A2-D8	4	DYDLFGMDV	QQANSFPLT		(-)	(-)
A2-D8 A1-E7	8	DYDLFGMDV	QQANSFPLT	(+)		
A1-E7 A2-B11	9	DYDLFGMDV	QQANSFPLT	(+)	(+)	(-)
A2-D11 A2-D7	9	DYDLFGMDV		(+)	(+)	(-)
A2-D7 A2-H4	-	DYDLFGMDV	QQANSFPLT QQANSFPVT	N/A	(+)	(+)
A2-04 A2-D12	9		QQANSFPVI	(+)	(+)	(-)
	9	DYDLFGMDV		(+)	(+)	(+)
A2-E10	9	DYDLFGMDV DYDLFGMDV		(+)	(+)	(-)
A2-F5	7	DYDLFGMDV		(+)	(-)	(-)
A2-F4	10	EGDYGGLYFDY		(+)	(+)	(+)
A1-B3	5	EGDYGGLYFDY	QHYYSTPLT	(+)	(-)	(-)
A2-D1	3	EGDYGGLYFDY	QQYGSSPLT	(+)	(+)	(+)
A2-B4	6	EGDYGGLYFDY	QQYGSSPLT	(+)	(+)	(+)
A2-C5	6	EGDYGGLYFDY	QQYGSSPLT	(+)	(+)	(+)
A2-E8	11	EGDYGGLYFDY	QQYSNSPLT	(+)	(+)	(+)
A2-B2	?	EGDYGGLYFDY	QQYSNSPLT	(+)	(+)	(+)
A2-C12	13	EGVGSWYFDL	QQYGSSPT	(+)	(+)	(-)
A2-E6		EYEQNGKDV	QQANRSPRT	N/A	(+)	(-)
A2-A9	8	GAVAGGSYGMDV	QQYYSTPLT	(+)	(+)	(+)
A1-C7	18	GSSGWYGPDYYGMDV	HQSSSLPQT	(+)	(-)	(-)
A2-C10	1	IYSYGFWYYYGMDV	MQALQTLT	(+)	(-)	(-)
		I TOTAL TELLICIPIDY	INICOLEGIEI	(+)	(-)	(-)